

FC/FD SERIES

MINI FILTER SEPARATOR

REPLACEMENT KIT FOR FS-½ & FS-1




Risk of injury. Release all air pressure from system before servicing.

Model	Element	Float Drain
FS-½	EFS-½	AD41
FS-1	EFS-1	AD41

>> HOW TO INSTALL A NEW FILTER ELEMENT

- Press on the latch pin and turn the bowl 1/8 left or right.
- Unscrew the baffle.
- Remove the old filter element.
- Install the new filter element, put the bowl back and make sure that the latch pin is in the center of the head unit.
- Open air supply SLOWLY. Check for air leakage. If leakage occurs, shut off air supply, relieve pressure from unit by manually activating the float drain on the bottom of the FS, and make sure that the bowl is installed properly.

>> INSTALLATION

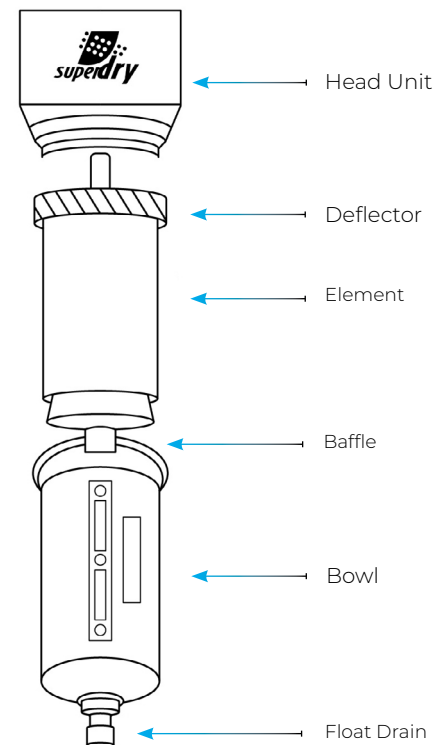

**Replace the filter element at least once a year
and the float drain every two year**