


FSD/SAF SERIES

FLOAT DRAIN FOR FSD AND SAF SERIES



Risk of injury. Release all air pressure from system before servicing.

>> HOW TO INSTALL A NEW FLOAT DRAIN

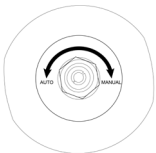

Depressurize the filter/separator by turning the float drain clockwise to the MANUAL position.

- Remove the bowl.
- Unscrew the hex nut.
- Remove the float from the bowl.
- Remove the hex nut from the new float drain but leave the o-ring in place. (o-ring seals from the inside of the bowl)
- Insert the float inside the bowl.
- Thread the hex nut from the outside of the bowl.

>> INSTALLATION

