

SAF SERIES






COMPRESSED AIR FILTERS

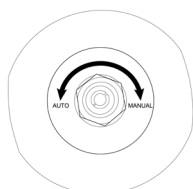
REPLACEMENT ELEMENT





Risk of injury. Release all air pressure from system before servicing.

>> HOW TO INSTALL A NEW ELEMENT

-  Depressurize by turning the float drain clockwise to the MANUAL position.
-  Remove the bowl.
-  Remove the old element and discard.
-  Remove element from packaging and check to ensure that o-ring is positioned correctly.
-  Insert the new element in the filter head.



-  Reassemble the filter and set the float drain to AUTOMATIC position.

-  Re-open air supply SLOWLY. Check for air leakage. If leakage occurs, shut off the air supply, relieve pressure from the unit by manually activating the float drain on the bottom of the SAF, and make sure that the bowl is installed correctly.

>> INSTALLATION

